

Installation Instructions: 5W/7W Firestay CCT LED Sensor Downlights (08188)

Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control.

- BELL Lighting will not accept responsibility for any claims arising from poor installation.
- The operating temperature should be between -20 and 35°C.
- Always switch off mains supply before installing.
- Mount to a stable, secure surface that is rated for the weight of the luminaire.
- Ensure all earth connections are secure, and the luminaire is effectively grounded.
- Not suitable for ATEX hazardous zones (explosive atmospheres).
- Not suitable for outdoor use, indoor use only.
- To ensure optimum performance, keep the front diffuser clean. Wipe with a soft, damp lint free cloth. Do not use soaps, detergents, solvents or abrasive materials.
- Not intended for use by children.
- The light source of this luminaire is not replaceable, when the light source reaches end of life, the whole luminaire must be replaced.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery.

 
Where possible recycle your packaging.





Read these instructions before installation and retain for future reference
This equipment should be installed by a competent electrician



This luminaire contains a light source with Energy Rating E



- Cut a suitable diameter hole in the ceiling for your downlight (see Table 1) ensuring that it does not infringe with electrical cables, water/gas pipes or ceiling joists (see Figure 1)
- Remove bezel and adjust to required colour temperature and wattage (see Figure 2)
- Wire the female connector (separate in the package) to the circuit, make the necessary circuit tests. Connect the male connector (the one which is connected to the lamp) to the female connector, ensuring that they are fully 'Clicked' (see Figure 3)
- Fold spring clips upwards and insert fitting into the hole (see Figure 4)
- Release spring clips to hole fitting in place (see Figure 5)
- Test for correct operation

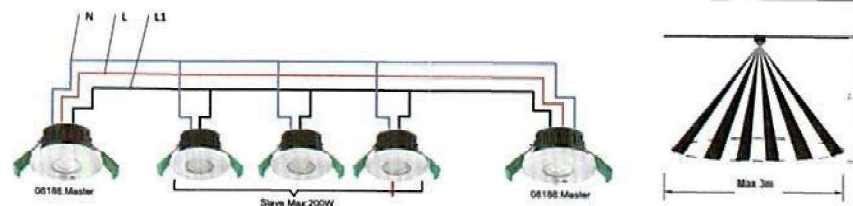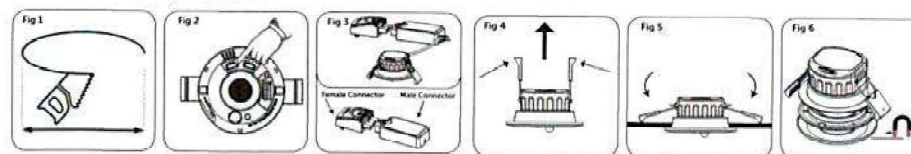  

1	2	3	4	5	6	Stand By
OFF	OFF	1 min	OFF	OFF	25 %	OFF
OFF	ON	2 min	OFF	ON	50%	ON
ON	OFF	3 min	ON	OFF	75%	
ON	ON	5 min	ON	ON	100%	

The lamp is supplied complete with a white magnetic bezel.

Firestay CCT Downlights have a choice of four colour temperatures (2700K/3000K/4000K/6000K) and also a choice of two wattages (5W/7W)

You can choose the colour temperature and wattage you prefer via the switches under the magnetic bezel


To change bezels simply place the magnetic bezel on the fitting (see Figure 6)

Insulation Coverable (IC Rated)

The lamp is designed for use with insulation material so that it does not need extra IC cage accessories



Downlight	Cut Out Ø
08188	68-70mm

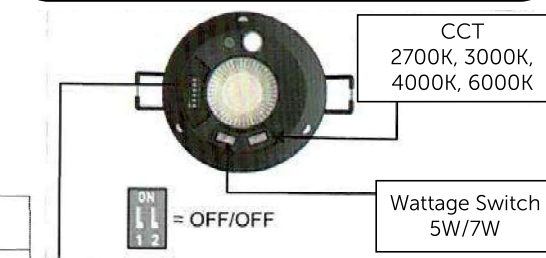 

British Electric Lamps Ltd
 BELL House, Foxbridge Way, Normanton Industrial Estate
 Normanton, West Yorkshire. WF6 1TN

BELL Ireland
 Marina House, Clarence Street, Dun Laoghaire
 County Dublin, Ireland, A96 AX76

T: +44 (0)1924 893380 F: +44 (0)1924 894320
 E: sales@belllighting.co.uk

www.belllighting.co.uk

Technical Helpline +44 (0)1924 893380

Technical@belllighting.co.uk